

Parametri za setovanje skenera Metrologic MS-6220KBW (keyboard verzija)

Enter/Exit Configuration Mode



Recall Defaults



Enable RS-232.



Enable STX Prefix.



Enable UPC Prefix ID.



Transmit Lead Zero on UPC-E.



Odd Parity.



4800 BAUD Rate.



Enter/Exit Configuration Mode



Napomena:

(Odnosi se na RS232 verziju)

Pojedine verzije skenera zahtevaju da se setuje i RTS/CTS handshaking. Ukoliko vam skener ne radi posle setovanja parametara sa leve strane, onda u sledecem setovanju posle (4800bRate) skenirajte RTS/CTS handshaking.

Enable RTS/CTS Handshaking.

