


Parametri za setovanje skenera Metrologic MS-6220 i MS-9520 za registar kasu Er-a277S

Za povezivanje kase i skenera koristite kabal koji dolazi uz skener sa oznakom "54000B" ili "5300B".Kabal nije potrebno prepravljati.
Skener se napaja preko eksternog adaptera.

Sema veze izmedju kase i skenera


10-pin modular jack Scanner side	9-pin D-sub ECR side
Pin 1 -----	Pin 5
Pin 2 -----	Pin 2
Pin 3 -----	Pin 3
Pin 4 -----	Pin 8
Pin 5 -----	Pin 7
Pin 6 -----	Pin 4
Pin 7 -----	Open
Pin 8 -----	Pin 6
Pin 9 -----	Pin 9
Pin 10 -----	Pin 1

999999

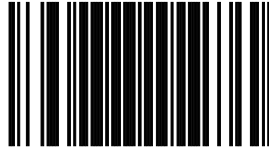

Enter/Exit
Configuration Mode
Recall Defaults

999998

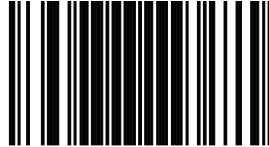


Enable "F/L" Laser Command

118014



Odd Parity

316005

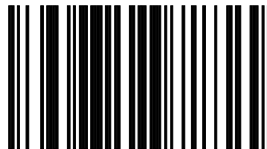

Enable RTS/CTS Handshaking

115816



999999



Enter/Exit
Configuration Mode